



ИНСТРУКЦИЯ ПО СБОРКЕ СТОЛА WD-16

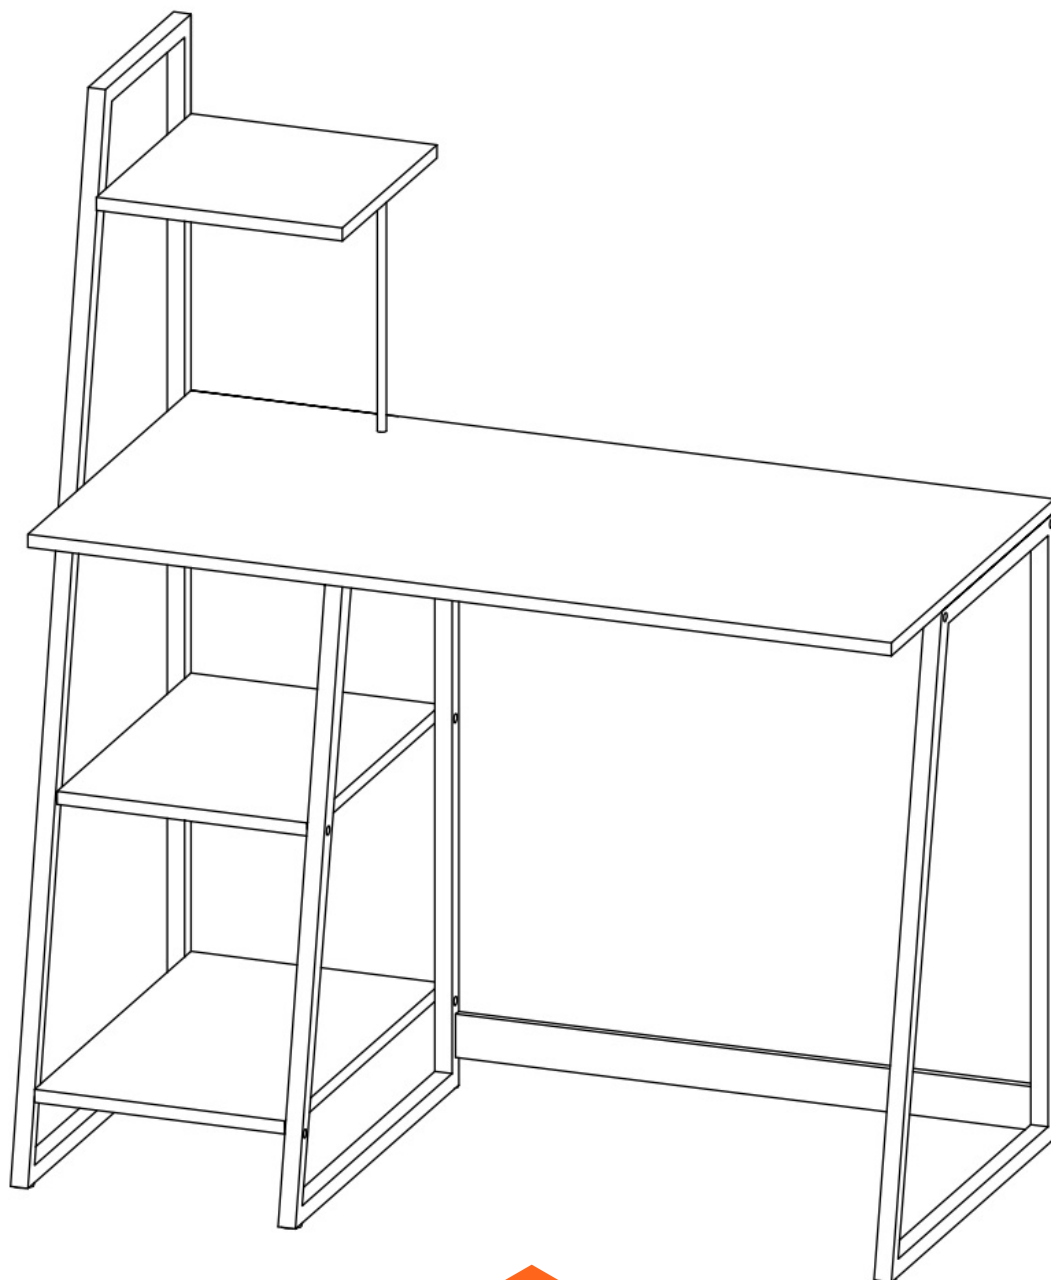


TETCHAIR

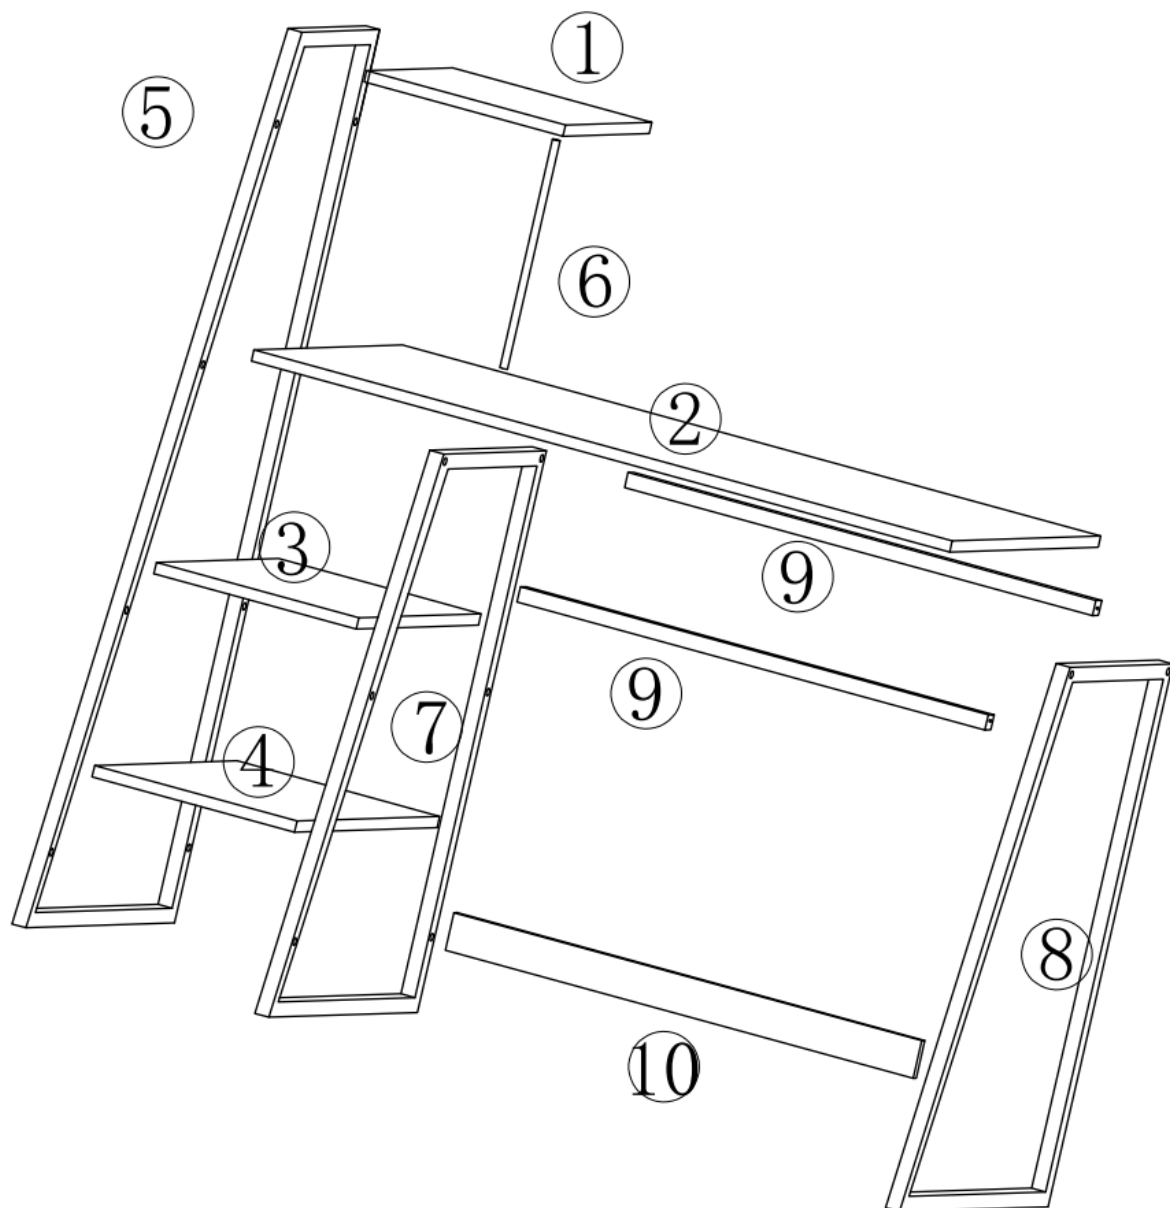

КОМПЛЕКТНОСТЬ



① 1PC

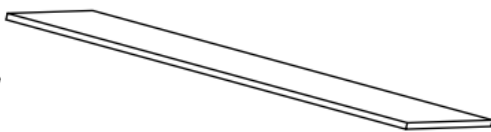

② 1PC



③ 1PC




④ 1PC




⑤ 1PC



⑥ 1PC

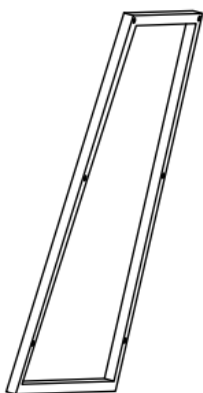

⑦ 1PC

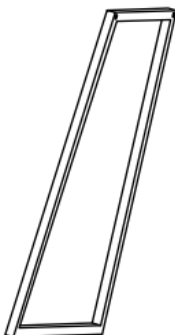






⑧ 1PC



⑨ 2PC




⑩ 1PC



<p>A M6x40mm</p>  <p>8PCS</p>	<p>B 6x50mm</p>  <p>12PCS</p>	<p>C M6x25mm</p>  <p>1PCS</p>	<p>D 4mm</p>  <p>1PCS</p>
<p>E</p>  <p>6PCS</p>			




TETCHAIR

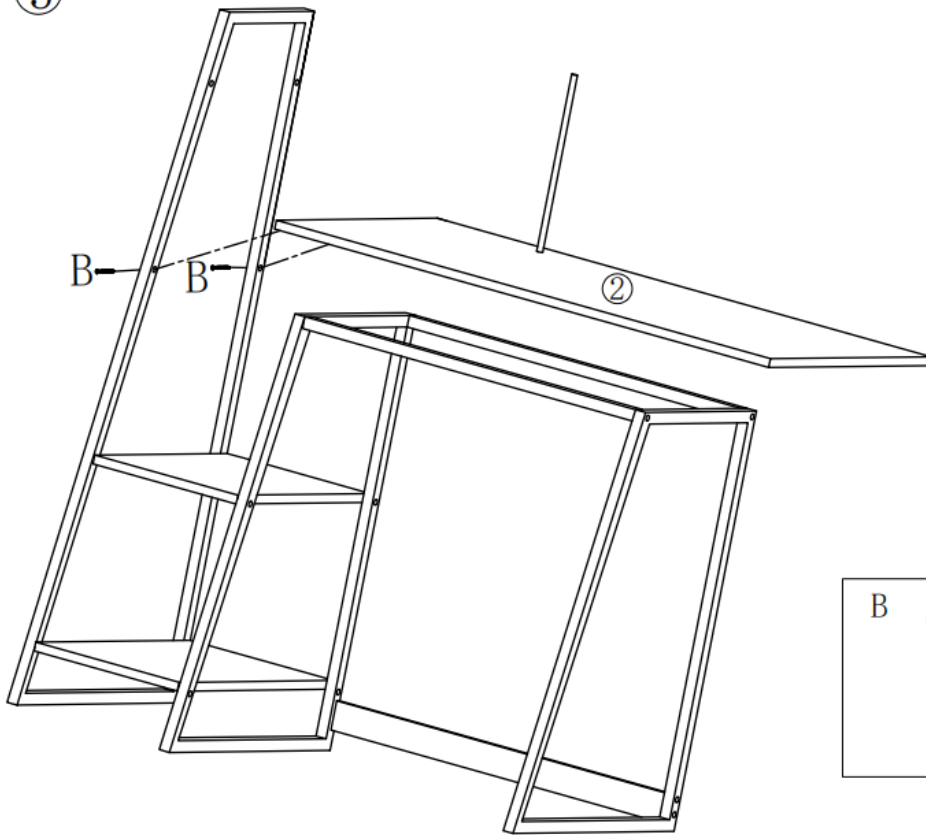


③



B	6x50mm	D	4mm
			
2PCS		1PCS	

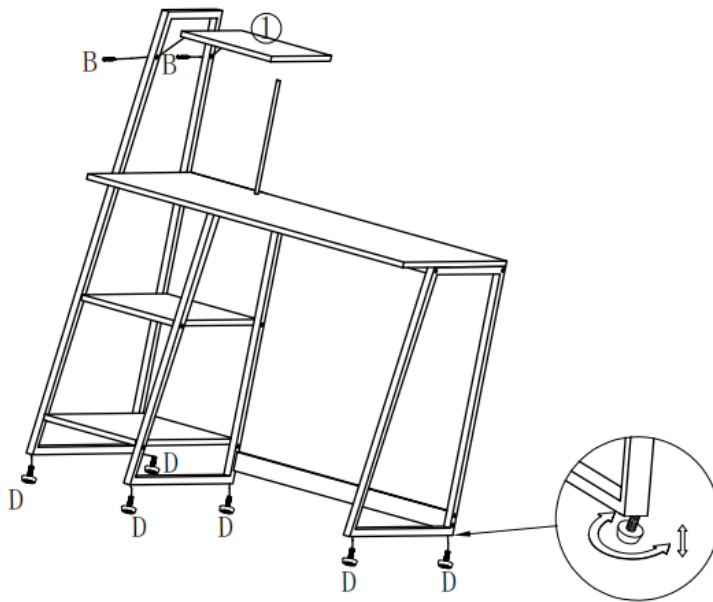④




B	6x50mm	D	4mm	D	
					
2PCS		1PCS		6PCS	




P-03




TETCHAIR

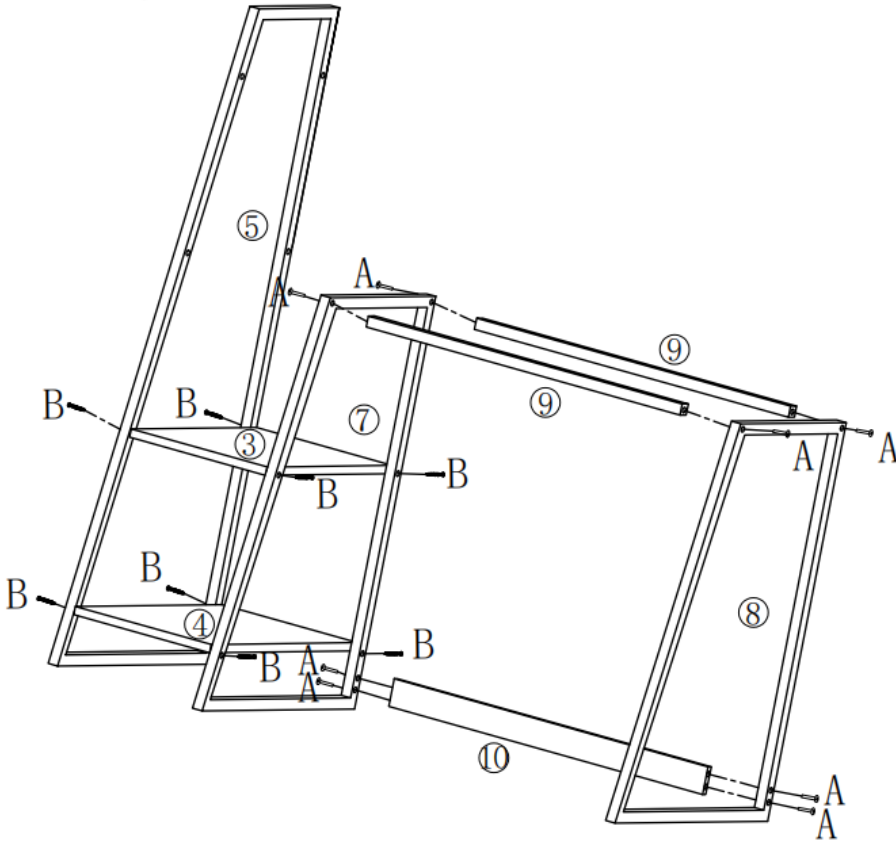

①



A	M6x40mm  8PCS	B	6x50mm  8PCS
D	4mm  1PCS		

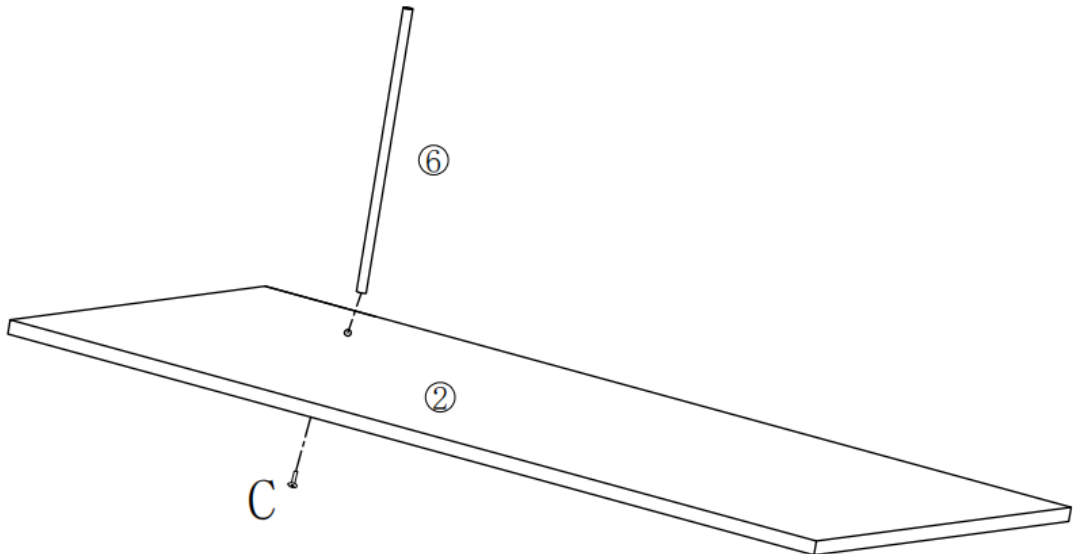②



C	M6x25mm  1PCS	D	4mm  1PCS
---	--------------------------------------------------------------------------------------------------------	---	----------------------------------------------------------------------------------------------------

P-04

